


DOSRON

RE01 Series

Handheld Emitter Manual

Product Description

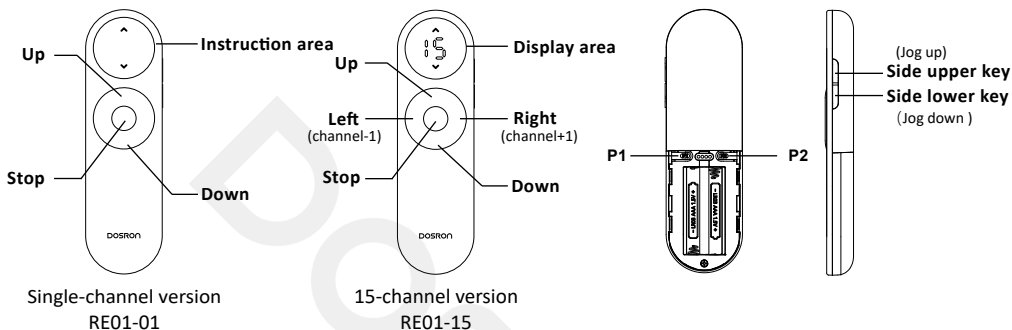

Channel Description [15-channel version]

Channel Switching & Selection

Channel range: 1-15

Numbers on the display stand for different channels. Use the “Left” or “Right” button to switch channels. When the number you want shows up, that channel is selected, and you can control its connected device. When “A” is displayed, you can control all set-up devices.

Locking & Unlocking Maximum Channel Value

Lock: Press and hold the “P1” button for 3 seconds, the current channel value will lock as the maximum.
Unlock: Press and hold the “P1” button again for 3 seconds to reset the maximum channel value.

Technical Specifications

Battery type: 3V (2 AAA batteries)	Working temperature: 0-40°C
Transmitting frequency: 433.92 MHz	Transmission power: 10 mW

Warning: Be Careful

1. Use two AAA batteries. Do not mix new and old batteries, or those of different brands or types.
2. Replace batteries promptly if transmitter sensitivity drops or range shortens.
3. Remove batteries when not in use for a long time to prevent leakage and component corrosion.
4. Do not dispose of batteries in household garbage or incinerate them.
5. Use in dry, normal-temperature environments. Avoid humidity and high temperatures.
6. Do not disassemble or modify the emitter without permission, this may damage internal structures.
7. Keep the emitter away from children to prevent battery swallowing, incorrect operation, or safety hazards.